





How to shift a "end pull" Irripod system:


Step 1:
Leave the system on. Connect the tow rope to the ATV in the direction of the next shift location.

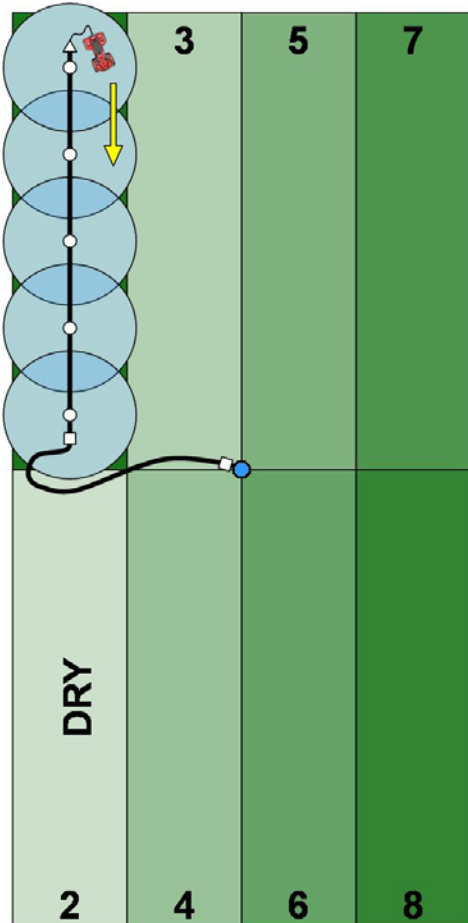


Step 2:
While the system is still running, tow the pod line down the field and cross over the supply line.

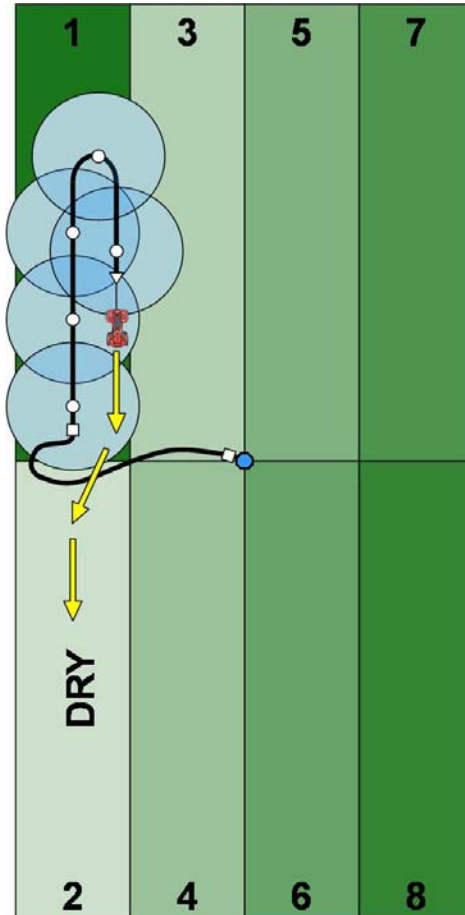

Step 3:
Make a gentle turn and line up the pods into the next shift position and pull to the end of the field.

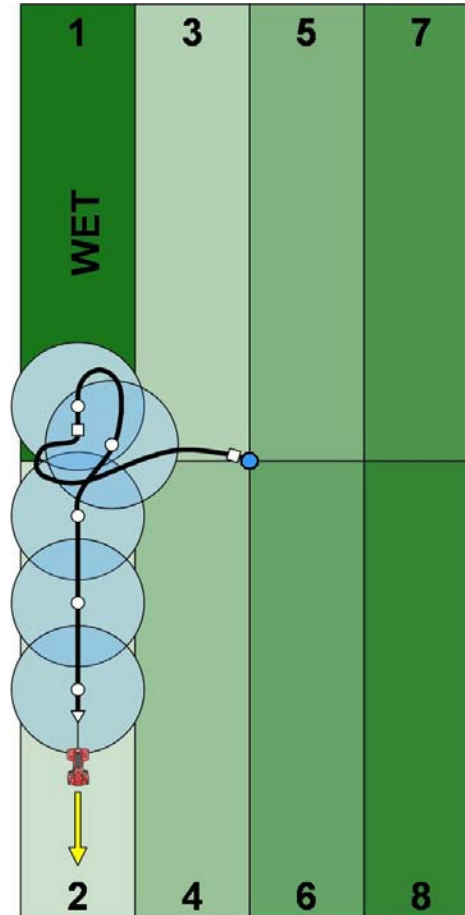

Step 4:
Unhook the tow rope and leave the pod system to irrigate. Repeat steps 1-4 until all shifts are complete, then start back at shift #1.

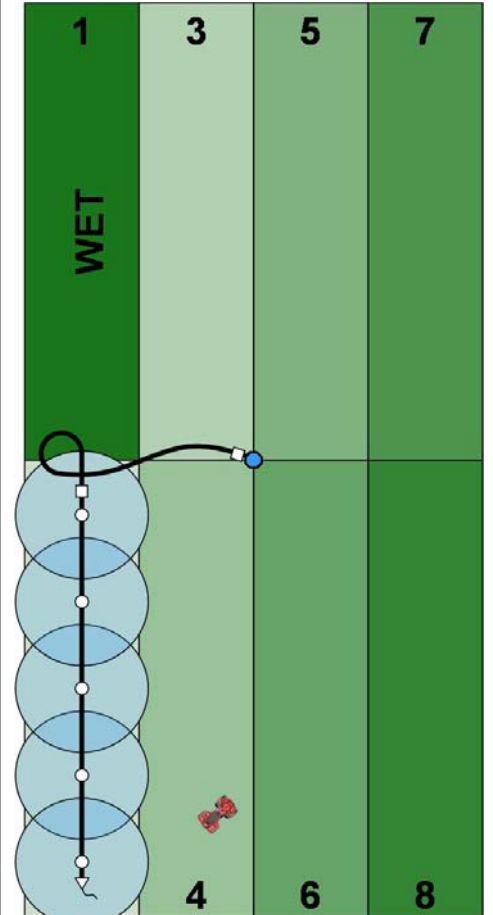




How to shift a "center pull" Irripod system:


Step 1:

A "center pull" system is designed with cam loc fittings so that the pod line can be towed from both ends.

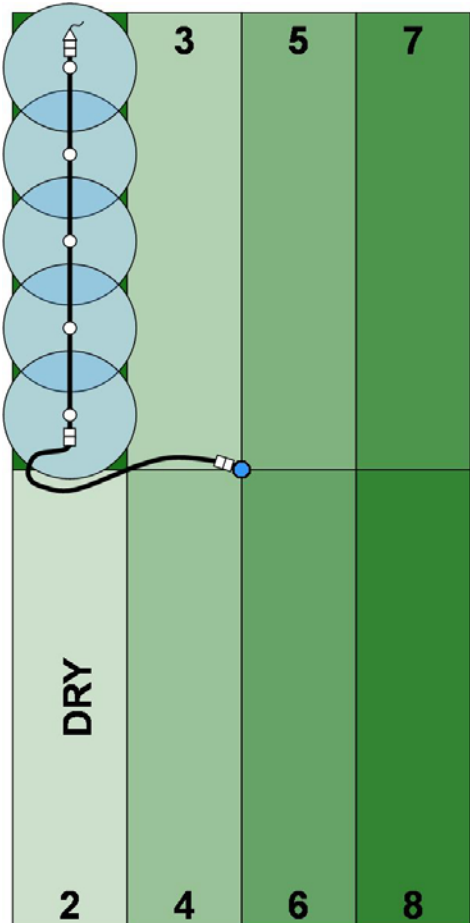


Step 2:

Turn the system off, remove the tow hook from the end of the pod line, unhook the supply line, and attach the tow hook to the pod line as shown.

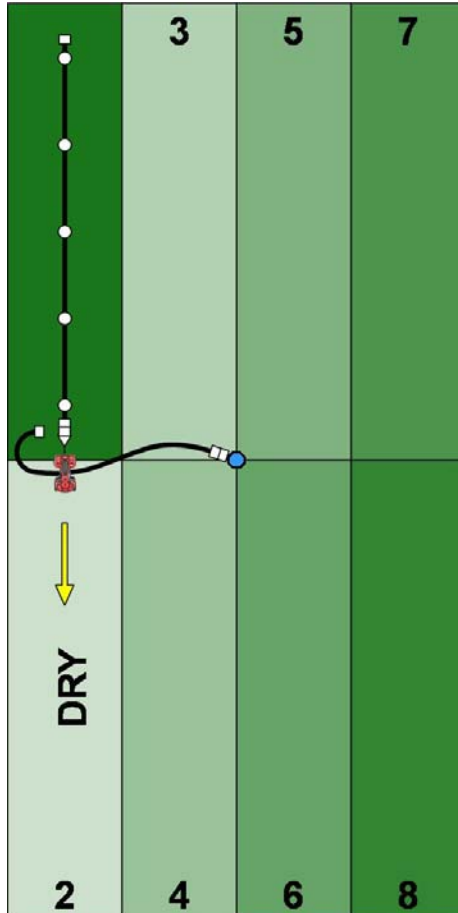

Step 3:

Pull the pod line over the supply line to the end of the field.

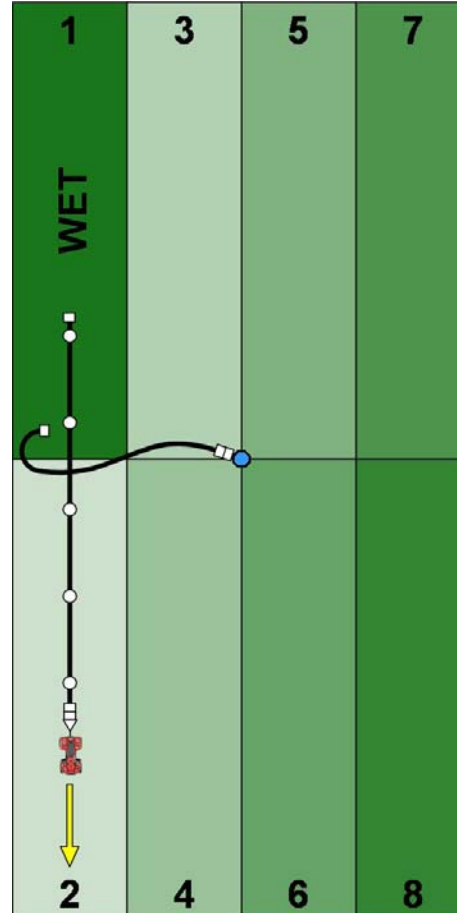

Step 4:

Reconnect the supply line, turn on the water, and leave the system to irrigate. Repeat steps 1-4 until all shifts are complete, then start back at shift #1.

